

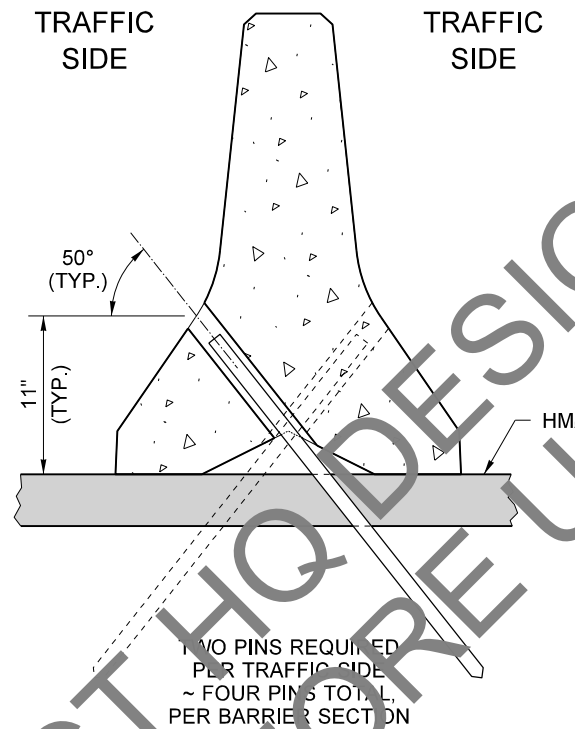


NOTES

1. The intended use of this plan is for the permanent anchoring of Precast Concrete Barrier Type 2 (see **TB-32**) on hot mix asphalt pavement.
2. Remove the Type 3 Anchors by first driving the steel pins down through the barrier further into the pavement to allow lifting the barrier without interference, then remove the pins from the pavement.
3. After removing the Type 3 Anchors, clean the pin holes and fill them with sealant according to **Standard Specification, Section 9-04.2**.

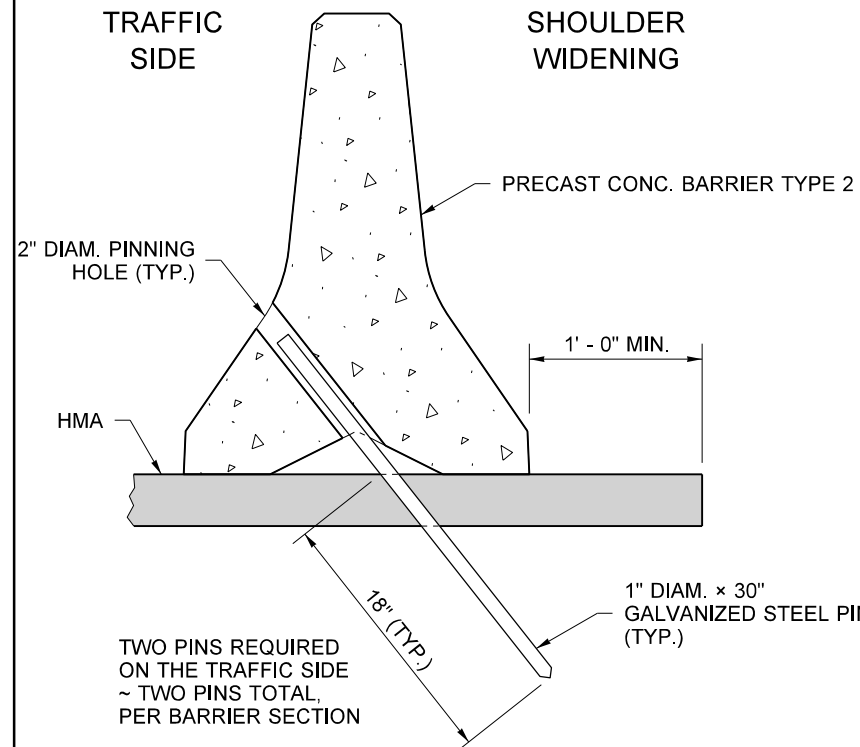

**SECTION VIEWS
TYPE 3 ANCHOR
PIN LOCATIONS**

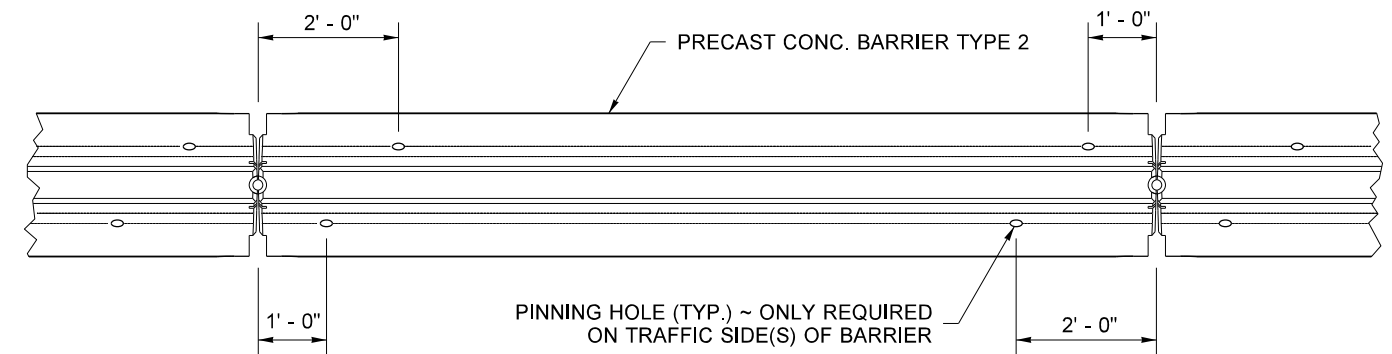

**PLAN VIEW
TYPE 3 ANCHOR
PIN LOCATIONS**

FILE NAME	S:\Design R P& S\4-Standards\2-Plan Sheet Library\01-Master_PSL\TB Traffic Barrier\TB-C conversions 2022\TB-04(c8e).e.dgn						
TIME	7:52:41 AM						
DATE	10/17/2022						
PLOTTED BY	liddelf						
DESIGNED BY							
ENTERED BY							
CHECKED BY							
PROJ. ENGR.							
REGIONAL ADM.							
REVISION	DATE	BY	REGION NO.	STATE	FED. AID PROJ. NO.	CONTRACT NO.	LOCATION NO.
			10	WASH			

P.E. STAMP BOX

P.E. STAMP BOX



**PRECAST CONCRETE BARRIER ANCHOR
TYPE 3 (PERMANENT)**

TB-104

SHEET
1
OF
1
SHEETS