


Rural Casing Installation
Figure 120-10

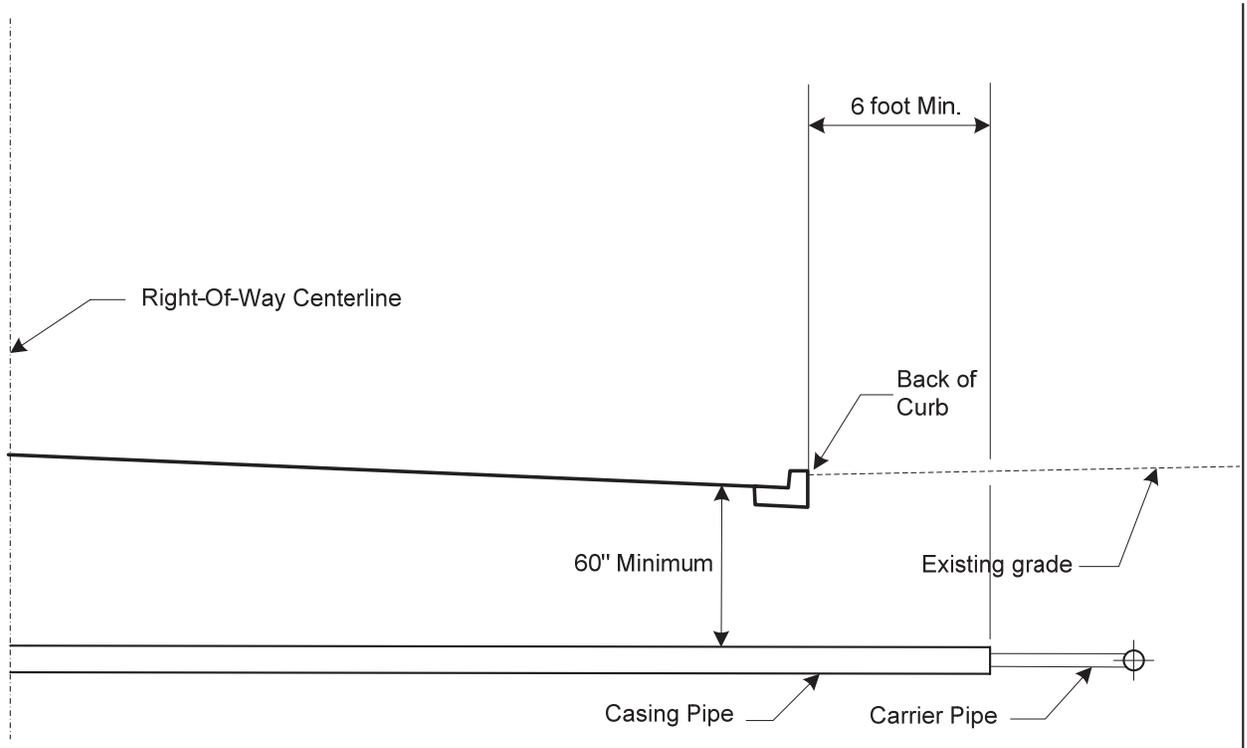

Urban Casing Installation
Figure 120-11