
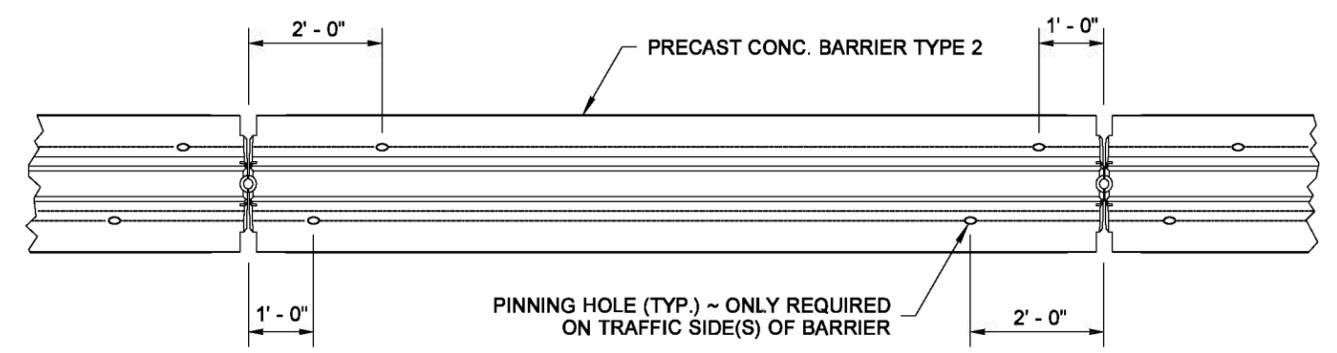


SECTION VIEWS
TYPE 3 ANCHOR
PIN LOCATIONS

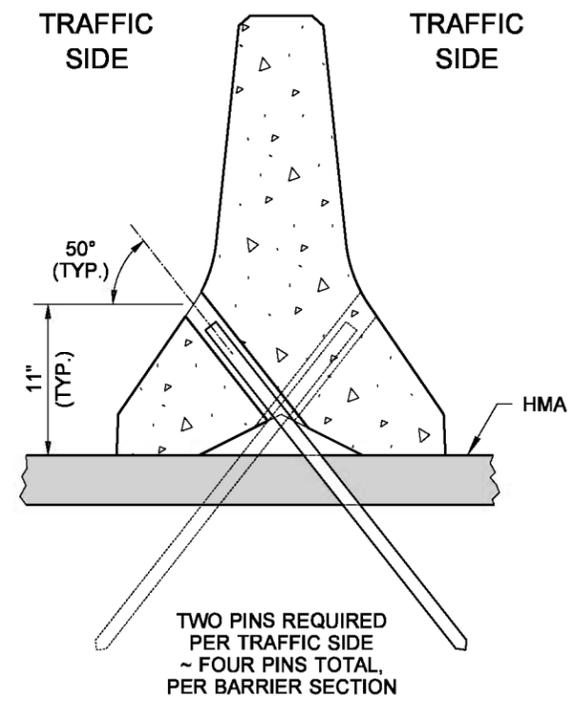

PLAN VIEW
TYPE 3 ANCHOR
PIN LOCATIONS

NOTES

1. The intended use of this plan is for the permanent anchoring of Precast Concrete Barrier Type 2 (see Standard Plan C-8) on hot mix asphalt pavement.
2. Remove the Type 3 Anchors by first driving the steel pins down through the barrier further into the pavement to allow lifting the barrier without interference, then remove the pins from the pavement.
3. After removing the Type 3 Anchors, clean the pin holes and fill them with sealant according to Standard Specification 9-04.2.



EXPIRES JULY 24, 2008

NOTE: THIS PLAN IS NOT A LEGAL ENGINEERING DOCUMENT BUT ELECTRONIC DATA. THE ORIGINAL, SIGNED BY THE ENGINEER AND APPROVED FOR PUBLICATION, IS KEPT ON FILE AT THE WASHINGTON STATE DEPARTMENT OF TRANSPORTATION. A COPY MAY BE OBTAINED UPON REQUEST.

**PRECAST CONC. BARRIER
ANCHOR ~ TYPE 3
(PERMANENT)
STANDARD PLAN C-8e**

SHEET 1 OF 1 SHEET

APPROVED FOR PUBLICATION

Ken L. Smith 02-21-07
STATE DESIGN ENGINEER DATE

02/2007	REMOVED TEMPORARY ANCHORS	MAS
DATE	REVISION	BY

